



# Square D™ Mono-Flat Covers

A new high-end alternative  
for load center covers

## Unique features

- Aesthetically pleasing design for all load center applications
- Low profile surface cover with concealed hardware, trim mounting screws and door hinges
- Easy to install utilizing the EZ hang bracket
- Double door latches standard on 60 space load center covers
- Deadfront design makes servicing load center easier
- Available in gray and white for QO™ load centers and gray only for Homeline™ load centers
- Type 1
- Field installable lock kit available, order catalog number PK4FL



[se.com/us/digestplus](http://se.com/us/digestplus)

Authorized Partner



Life Is On



# Specifications

Covers for QO Load Centers				
Catalog number	Spaces	Color	Mechanical specs	
			W x H x D (mm)	W x H x D (in)
QOCMF30UC	30	Gray	394.2 x 797.1 x 26.4	15.52 x 31.38 x 1.04
QOCMF30UCW	30	White	394.2 x 797.1 x 26.4	15.52 x 31.38 x 1.04
QOCMF42UC	42	Gray	394.2 x 1003.6 x 26.4	15.52 x 39.51 x 1.04
QOCMF42UCW	42	White	394.2 x 1003.6 x 26.4	15.52 x 39.51 x 1.04
QOCMF54UC	54	Gray	394.2 x 1029.2 x 26.4	15.52 x 40.52 x 1.04
QOCMF54UCW	54	White	394.2 x 1029.2 x 26.4	15.52 x 40.52 x 1.04
QOCMF60UC	60	Gray	394.2 x 1081.8 x 26.4	15.52 x 42.59 x 1.04
QOCMF60UCW	60	White	394.2 x 1081.8 x 26.4	15.52 x 42.59 x 1.04

Covers for QO Wide Gutter Load Centers				
Catalog number	Spaces	Color	Mechanical specs	
			W x H x D (mm)	W x H x D (in)
NQC20FWG	20	Gray	394.2 x 561.34 x 26.4	15.52 x 22.10 x 1.04
NQC20FWGW	20	White	394.2 x 561.34 x 26.4	15.52 x 22.10 x 1.04
NQC30FWG*	30	Gray	394.2 x 788.41 x 26.4	15.52 x 31.04 x 1.04
NQC30FWGW*	30	White	394.2 x 788.41 x 26.4	15.52 x 31.04 x 1.04

Covers for Homeline Load Centers				
Catalog number	Spaces	Color	Mechanical specs	
			W x H x D (mm)	W x H x D (in)
HOMCMF60UC	60	Gray	394.2 x 1273.6 x 26.4	15.52 x 50.14 x 1.04

Accessories		
Catalog number	Description	
PK4FL	Door Lock Kit	

\*CANNOT be used when panel has been converted to main circuit breaker panel.



QOMF42UCW




QOMF42UC

## Mono-Flat Covers

### Simple Installation

1. Install Mounting Brackets
2. Install Deadfront
3. Mount Trim with EZ-hang bracket
4. Install Trim Screws
5. Installation Complete

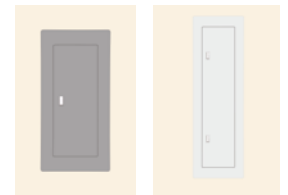

Authorized Partner

cedorlando.com  
 (407) 422-9841  
 marketing@cedorlando.com



[se.com/us/digestplus](http://se.com/us/digestplus)

Life Is On



Boston One Campus  
 800 Federal Street  
 Andover, MA 01810

© 2020 Schneider Electric. All Rights Reserved. Schneider Electric, Life Is On Schneider Electric, Square D, Homeline, and QO are trademarks and the property of Schneider Electric, its subsidiaries, and affiliated companies. All other trademarks are the property of their respective owners.  
 • 998-2085541\_US